# **DMO600**

# **Digital Micro-Ohmmeter** with USB data storage

A USB keyboard and USB memory key are supplied with the DMO600.

**Test current presets** 

**USB** data storage

600A by default.

Programmable buttons to set test currents. Set to 100A, 300A and

All test results can be stored automatically

on a standard USB memory key. The unit has a real-time clock to time and datestamp all results. Results are written to a CSV file that can be opened by any spreadsheet program. A

USB keyboard is supplied to

add comments to results.

Comment Press this button to enter a new com-

ment on the key-

**Universal supply** 

90-264V supply voltage with no restriction on output current.

# Main Output

5V 10-600A pre-settable current. Thermal and over-current protection. <2.5% ripple.

### mV Input

Sense input for 4 wire resistance measurement.

#### **Current clamp input**

Connect the optional DC current clamp to measure resistances with both sides earthed.



**Optional** current clamp

#### Available in a Pelicase





**Optional extension lead sets** Optional output and sense extension lead sets

10-600A Test Current

 $0.1\mu\Omega$ —5 $\Omega$  Resistance

USB Test Data Storage

600A for 2 minutes

available in 3m, 5m and 10m lengths.

&R Test Equip

# Standard lead set

in carry case supplied with unit.



Tel lest a previle





board.


High quality 3m 600A output leads



36

# **Example Applications** Busbar joint resistance

The DMO600 is ideal for measuring busbar joint resistance. Before making connections ensure that the supply is off and necessary earths have been applied. Connect the high current leads to the busbar, ensuring that the joint resistance to be measured is in the circuit. Connect the sense leads as close as possible to the joint to be measured. Select the desired test current using one of the preset test currents (or use the adjust knob to set a custom test current). Switch the output ON, and the current rises to the preset current. Switch the output OFF again, and the reading is held on the display.

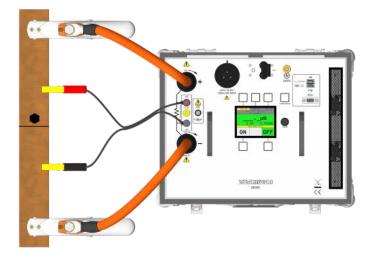

#### **Storing results**

The DMO600 is supplied with a USB memory key and USB keyboard for storing annotated results. To enter or edit a comment tap the COMMENT/MENU button. The comment can then be edited using the keyboard. This comment is stored with each result until a new comment is entered. Each time the output of the unit is switched off the readings from the unit are saved to the USB memory key in CSV format along with the date, time and your comment.

The CSV file can be opened with any spreadsheet program such as Microsoft Excel<sup>™</sup> or OpenOffice Calc.

	A	B	С	D	E	F	G	H	L	J		ľ
1	DMO200	V1.00	C01									ſ
2	Time	Date	Current	v	ohm	Re	Comment					
3	10:00:00	10/05/2010	200	2.00E-04	1.00E-06	Y	South swit	tchyard br	eaker 3 ph	ase A		ľ
4	10:01:10	10/05/2010	200	2.04E-04	1.02E-06	γ	South swit	chyard br	eaker 3 ph	ase B		l
5	10:02:13	10/05/2010	200	2.02E-04	1.01E-06	Y	South swit	chyard br	eaker 3 ph	ase C		l
6	10:00:00	10/05/2010	200	2.00E-04	1.00E-06	Y	South swit	chyard br	eaker 4 ph	ase A		1
7	10:01:10	10/05/2010	200	2.04E-04	1.02E-06	Y	South swit	tchyard br	eaker 4 ph	ase B		1
8	10:02:13	10/05/2010	200	2.02E-04	1.01E-06	γ	South swit	chyard br	eaker 4 ph	ase C		I
9												ł
14	+ > H 10	0000 / 😏 🦯					14	1000	lla second		*	
Rea	ybe						(III)	100	1%		-(+)	


#### **Optional accessories**

DM0600 current clamp	Part no. A224-0001
Output/sense extension 3m in plastic case	Part no. A231-0004
Output/sense extension 5m in plastic case	Part no. A231-0005
Output/sense extension 10m in plastic case	Part no. A231-0006

#### Circuit breaker contact resistance

The DMO600 is suited to all low resistance measurements on power systems, and is particularly suited to measuring contact resistances on substation circuit breakers, isolators and grounding equipment. The unit has a powerful output capable of driving 600A through 20m output leads to reach the contacts of even the largest circuit breakers. Optional output lead extensions are available which extend the high current and sense leads by 3, 5 or 10m.

Accurate measurements on circuit breakers, isolators and grounding links with both sides earthed are simple with the optional current clamp. This allows the current flowing through the earthing equipment to be subtracted from the test current.

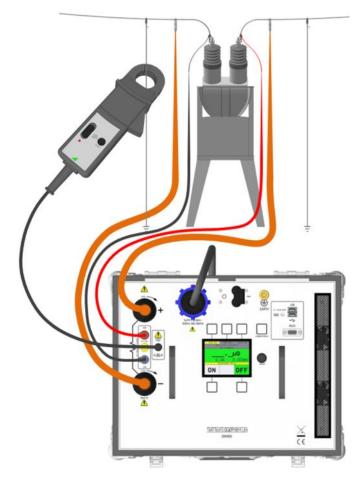

#### **Details**

Supply requirements:	90-265Vac 3800VA max				
Output:	10-600ADC 5V				
Resistance measurement:	0.1μΩ-5Ω				
Resistance measurement:	0.1µ(2-5(2				

#### Dimensions

Standard Case: Pelicase Unit: 380x314x211mm 560x456x265mm Weight 15.8kg

19.7kg

 Pelicase Unit:
 560x456x265mm
 19.7

 Accessories supplied with unit: Mains lead, user manual,

3m high current leads, 3m sense leads.

Note: Due to the company's continuous research programme, the information above may change at any time without prior notification. Please check that you have the most recent data on the product. T&R Test Equipment Ltd, 15-16 Woodbridge Meadows, Guildford, Surrey, GU1 1BJ, UK

Tel: +44 (0)1483 207428 Fax: +44 (0)1483 511229 email: sales@trtest.com